



Preventive Maintenance Kit

Applicable Models: G-Cool™



PM Frequency: every 6 months or as needed

Parts Included:

Impeller(s)
Valve O-ring(s)
Pump Axle(s)

Description and Instructions:

1. Verify unit clearance per diagram.
2. Replace Impeller(s) and Pump Axle(s).
3. Replace Valve O-Ring(s).

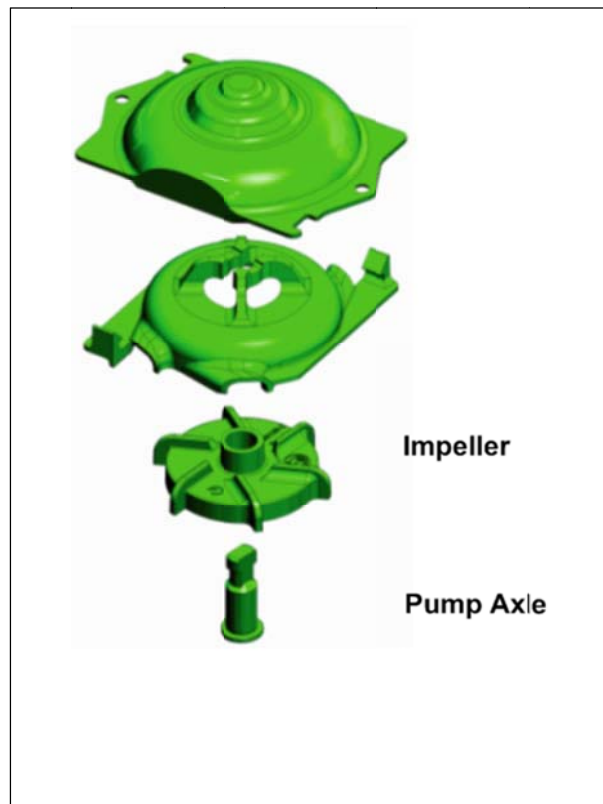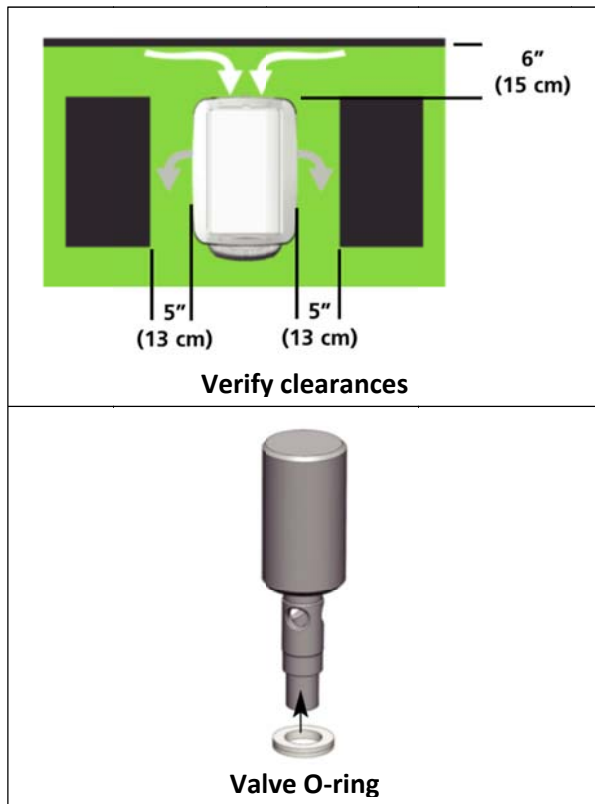

Operator Manuals, including use and care instructions as well as product video tutorials, can be found on our website, www.gmcw.com. Call 1-800-695-4500 for Technical Support.