



**Cecilware®**


# Operator Manual

## Syrup Warmer

SD1, SD2



**Model: SD1**

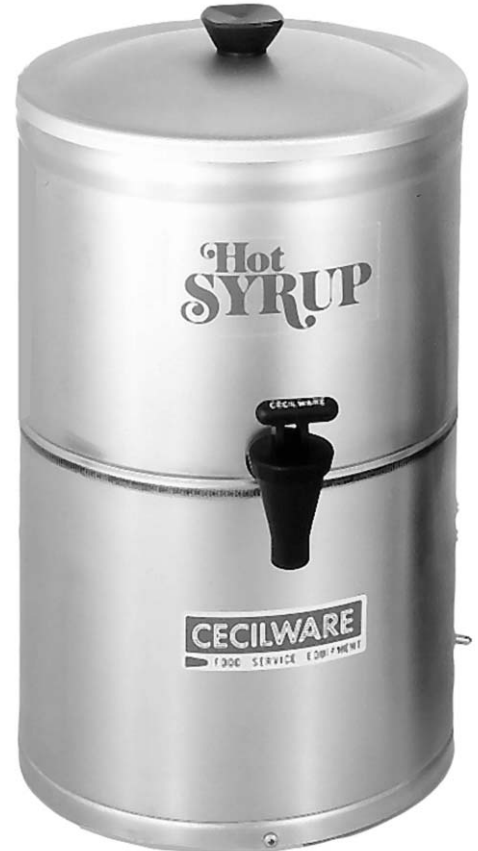

**Model: SD2**

### Table of Contents

|                          |   |                  |   |
|--------------------------|---|------------------|---|
| Safety Information ..... | 2 | Cleaning .....   | 3 |
| Unpacking .....          | 2 | Parts List ..... | 4 |
| Setup .....              | 2 |                  |   |

Thank you for purchasing this quality Syrup Warmer. For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product. Properly instruct all operators. Keep training records. For future reference, record serial number here:

**Grindmaster-Cecilware**

4003 Collins Lane, Louisville, KY 40245 USA  
Phone: 502.425.4776 Toll Free: 800.695.4500  
Fax: 502.425.4664  
Web: gmcw.com Email: info@gmcw.com

Grindmaster-Cecilware provides the industry's BEST warranty. Visit [gmcw.com](http://gmcw.com) for warranty terms and conditions.



**Grindmaster  
Cecilware**

## Safety Information

### Important Safety Information



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

For your safety and the safety of others, read all warnings and the operator's manual before installing or using the product.

**DANGER:** This term warns the user of imminent hazard that will result in serious injury or death.

**WARNING:** This term refers to a potential hazard or unsafe practice, which could result in serious injury or death.

**CAUTION:** This term refers to a potential hazard or unsafe practice, which could result in minor or moderate injury.

**NOTICE:** This term refers to information that needs special attention or must be fully understood.

### **⚠WARNING**

- Do not deform power cord.
- Follow national and local electrical codes.
- Use only on a dedicated circuit load that is properly protected and capable of the rated load. Do not use extension cords as this could result in electrical shock, overheating, and fire.
- Risk of electrical shock. Disconnect power before servicing or cleaning unit. Contact Grindmaster-Cecilware Technical Service for service assistance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.

FAILURE TO COMPLY TO THE ABOVE RISKS PERSONAL INJURY, SHOCK HAZARD, FIRE, OR DAMAGE TO EQUIPMENT.

## Unpacking

Carefully lift unit out of shipping container, and inspect immediately for shipping damage. Your Syrup Warmer was shipped in a carton designed to give it maximum protection. It was thoroughly inspected before leaving the factory. File any claims for shipping damage or irregularities directly with the carrier.

## Setup

- Place Syrup Warmer on a stable, level surface.
- This appliance is equipped with a three wire power cord. A three wire 120V, 15A, electrical circuit must be used. Do not use an extension cord.
- Before using syrup warmer for the first time, clean thoroughly.
- Add preheated syrup to the syrup warmer. The SD1 has 1 gallon capacity. The SD2 has 2 gallon capacity.
- Turn switch to ON position.

**⚠ CAUTION:** Disconnect power from syrup warmer before attempting electrical repairs.

If you need help, call Grindmaster-Cecilware Technical Service Department, (502) 425-4776 or (800) 695-4500 (USA & Canada only) (Monday through Friday 8 AM - 6 PM EST). Please have the model and serial number ready so that accurate information can be given.

Prior authorization must be obtained from Grindmaster- Cecilware for all warranty claims.

**Grindmaster-Cecilware provides the industry's BEST warranty. Visit our website at [GMCW.com](http://GMCW.com) for warranty terms and conditions.**

## Cleaning

**▲ CAUTION:** To avoid burns, allow syrup warmer to cool before cleaning.

**▲ CAUTION:** To prevent electrical shock, do not immerse unit in water. Unplug before cleaning.

**NOTICE:** All sanitizing agents in the food zone must comply with 21 CFR 178.1010.

Clean and sanitize syrup warming equipment and faucet at least once a day. Cleaning and sanitizing frequency must follow state and local health department regulations.

### Daily Cleaning

1. Inside surface: Using hot water and dishwashing detergent, scrub interior of dispenser and covers with non-abrasive bristle brush, including corners and bottom. Be sure the interior of the outlet shank is scrubbed to remove residues, then rinse thoroughly.
2. Outside surface: Wash surface with sponge using hot water and dishwashing detergent.
3. Sanitize all interior and exterior surfaces of the dispenser, including any utensils and covers.
4. Disassemble faucet by unscrewing the bonnet. Pull seat cup from faucet stem, and inspect seat cup for wear or hardening. Replace if necessary.
5. Scrub all faucet parts with bristle brush, using hot water and dishwashing detergent to remove all syrup residues.
6. Sanitize all parts.
7. Let all sanitized parts drain and air dry.
8. Reassemble faucet and reattach to dispenser. Hand tighten only.

### Sanitizing

1. Prepare a sanitizing solution in accordance with local health department regulations. You may also refer to the US Food and Drug Administration regulation 21 CFR 178.1010 "Sanitizing Solutions" and US Environmental Protection Agency 40 CFR 18.940 "Tolerance exemptions for active and inert ingredients for use in antimicrobial formulations (Food-contact surface sanitizing solutions)".
2. Follow the instructions provided with the sanitizing agent.
3. Let all sanitized parts drain and dry naturally.  
**DO NOT WIPE DRY.**




# Parts List

**SIDE VIEW**



**BOTTOM VIEW**

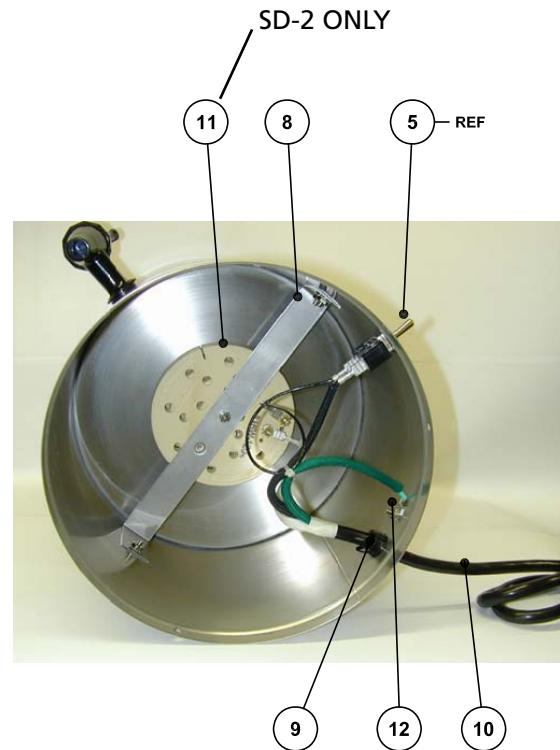

**PARTS LIST SD-1**

| ITEM # | PART #    | DESCRIPTION                            | QTY |
|--------|-----------|--|-----|
| 1      | Q149AL    | TOP COVER ASSEMBLY                     | 1   |
| 2      | M0576L    | FAUCET ASSEMBLY                        | 1   |
| 3      | M0464L    | LABEL, HOT SYRUP, BROWN                | 1   |
| 4      | NP39AL    | LABEL, CAUTION                         | 1   |
| 5      | L069AL    | TOGGLE SWITCH                          | 1   |
| 6      | N789A     | SWITCH PLATE, ON/OFF                   | 1   |
| 7      | P233A     | SCREW, 6-32 x 3/4 , RD HD              | 3   |
| 8      | U662A     | HEATER MOUNTING BRACKET                | 1   |
| 9      | B012A     | LINE CORD STRAIN RELIEF, HEYCO         | 1   |
| 10     | C032SL    | LINE CORD, 120V, 15 AMP W/O INSULATION | 1   |
| 11     | 320-00004 | HEATER                                 | 1   |
| 12     |           | CERAMIC GROUNDING STUD                 | 1   |

**PARTS LIST SD-2**

| ITEM # | PART # | DESCRIPTION                            | QTY |
|--------|--------|--|-----|
| 1      | Q050QL | TOP COVER ASSEMBLY                     | 1   |
| 2      | D037AL | FAUCET ASSEMBLY (STANDARD)***          | 1   |
| 3      | M0464L | LABEL, HOT SYRUP, BROWN                | 1   |
| 4      | NP39AL | LABEL, CAUTION                         | 1   |
| 5      | L069AL | TOGGLE SWITCH                          | 1   |
| 6      | N789A  | SWITCH PLATE, ON/OFF                   | 1   |
| 7      | P233A  | SCREW, 6-32 x 3/4 , RD HD              | 3   |
| 8      | U664A  | HEATER MOUNTING BRACKET                | 1   |
| 9      | B012A  | LINE CORD STRAIN RELIEF, HEYCO         | 1   |
| 10     | C032SL | LINE CORD, 120V, 15 AMP W/O INSULATION | 1   |
| 11     | G035AL | HEATING PLATE & COIL, CERAMIC          | 1   |
| 12     |        | GROUNDING STUD                         | 1   |

\*\*\* DO17A OPTIONAL (MUST BE FACTORY INSTALLED)

**Grindmaster-Cecilware**

4003 Collins Lane, Louisville, KY 40245 USA  
 Phone: 502.425.4776 Toll Free: 800.695.4500  
 Fax: 502.425.4664  
 Web: gmcw.com Email: info@gmcw.com

©2016 Grindmaster-Cecilware  
 Printed in USA

Grindmaster-Cecilware provides the industry's BEST warranty. Visit gmcw.com for warranty terms and conditions.



**Grindmaster  
Cecilware**

0516 Form # CW-338-01  
 Part # 390-00085