



# Preventive Maintenance Kit

**Applicable Models:** PIC Powdered Beverage Dispenser




**PM Frequency:** every 6 months or as needed

**Parts Included:**

Whipper Base Assemblies  
Slinger Washers  
O-Rings 0.239 x 0.070 for Whipper Motor Shaft  
Whipper Chamber Assemblies  
Whipper Blades  
O-Rings 0.335 x 0.079 for Funnel

**Description and Instructions:**

1. Lubricate motor shaft with food grade NSF safe lubricant (not included). Replace Slinger Washers and Whipper Bases. Check alignment of holes. If alignment is off, rotate base 180° to make sure holes line up.
2. Replace Whipper Blades (slide onto Motor shaft).
3. Replace Whipper Chambers.
4. Replace Funnel O-Rings (slide onto Funnels).

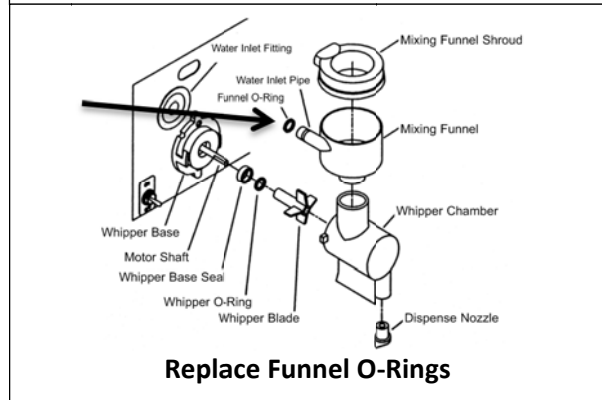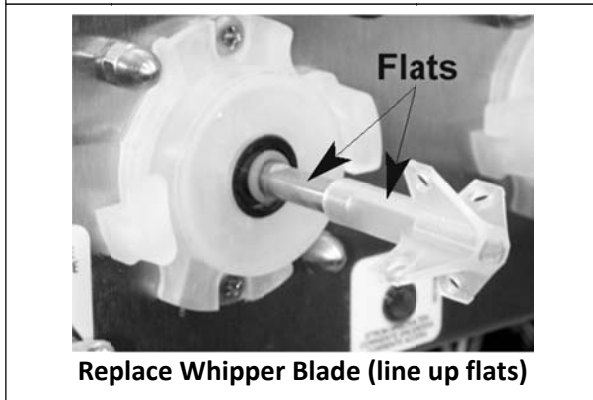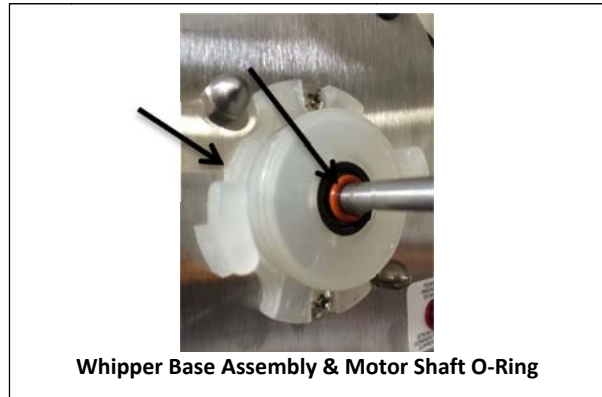

Operator Manuals, including use and care instructions as well as product video tutorials, can be found on our website, [www.gmcw.com](http://www.gmcw.com). Call 1-800-695-4500 for Technical Support.